


Parts Illustration List

Ref #	Part No.	Description	Qty
1	BWMLSD300001-2026	Hex Bolt M10x30	10
2	BWMLSD300002-2026	Jockey Wheel 8"	1
3	BWMLSD300003-2026	Flat Washer Ø10	21
4	BWMLSD300004-2026	Nylon Lock Nut M10	19
5	BWMLSD300005-2026	Moving Pipe	1
6	BWMLSD300006-2026	Outer Bushing	1
7	BWMLSD300007-2026	Safety Pin	1
8	BWMLSD300008-2026	Spring	1
9	BWMLSD300009-2026	Flat Washer Ø12	1
10	BWMLSD300010-2026	Cotter Pin Ø3.2x25	1
11	BWMLSD300011-2026	Screw Rod	1
12	BWMLSD300012-2026	Elastic Cylinder Pin	1
13	BWMLSD300013-2026	Thrust Ball Bearing	1
14	BWMLSD300014-2026	Handle Ball	1
15	BWMLSD300015-2026	Jockey Wheel Handle Bushing	1
16	BWMLSD300016-2026	Hook Chain	2
17	BWMLSD300017-2026	Hex Bolt M12x130	2
18	BWMLSD300018-2026	Flat Washer Ø12	25
19	BWMLSD300019-2026	Hex Bolt M12x90	1
20	BWMLSD300020-2026	50mm Coupler	1
21	BWMLSD300021-2026	nylon lock nut M12	24
22	BWMLSD300022-2026	Beam	1
23	BWMLSD300023-2026	Cylinder Pin	1
24	BWMLSD300024-2026	Cylinder	1
25	BWMLSD300025-2026	Cotter Pin Ø5x50	2
26	BWMLSD300026-2026	Combination Washer Ø14	4
27	BWMLSD300027-2026	Hydraulic Hose (Valve - Cylinder)	1
28	BWMLSD300028-2026	Bolt Connector	2
29	BWMLSD300029-2026	Valve Joiner	1
30	BWMLSD300030-2026	Valve	1
31	BWMLSD300031-2026	Left Stripper Plate	1
32	BWMLSD300032-2026	Plate	1
33	BWMLSD300033-2026	Screw M8x16	4
34	BWMLSD300034-2026	Active Connector	1
35	BWMLSD300035-2026	O Ring Ø20x2.5	1
36	BWMLSD300036-2026	Log Cradle	1

Ref #	Part No.	Description	Qty
37	BWMLSD300037-2026	Screw M12x55	10
38	BWMLSD300038-2026	Wedge	1
39	BWMLSD300039-2026	Wedge Spacer	2
40	BWMLSD300040-2026	Wedge Platen	2
41	BWMLSD300041-2026	Spring WasherØ12	10
42	BWMLSD300042-2026	Nylon Lock Nut M12	10
43	BWMLSD300043-2026	Hex Bolt M12x45	17
44	BWMLSD300044-2026	Connecting Frame	1
45	BWMLSD300045-2026	Hex Bolt M10x80	1
46	BWMLSD300046-2026	Fixed Pin	1
47	BWMLSD300047-2026	Support Leg	1
48	BWMLSD300048-2026	Right Stripper Plate	1
49	BWMLSD300049-2026	Left Fender	1
50	BWMLSD300050-2026	Tow Bar	1
51	BWMLSD300051-2026	Hex Bolt M12x35	4
52	BWMLSD300052-2026	Oil Tank	1
53	BWMLSD300053-2026	Return Oil Filter	1
54	BWMLSD300054-2026	Connector	1
55	BWMLSD300055-2026	Oil Filter	1
56	BWMLSD300056-2026	O Ring Ø72x2.4	1
57	BWMLSD300057-2026	Flange	1
58	BWMLSD300058-2026	Flat Washer Ø6	6
59	BWMLSD300059-2026	Spring Washer Ø6	6
60	BWMLSD300060-2026	Hex Bolt M6x20	6
61	BWMLSD300061-2026	Polyurethane Block	4
64	BWMLSD300064-2026	Gear Pump	1
65	BWMLSD300065-2026	Nylon Lock Nut M8	8
66	BWMLSD300066-2026	Flat Washer Ø8	12
67	BWMLSD300067-2026	Gear Pump Flat Key	1
68	BWMLSD300068-2026	Screw M6x10	1
69	BWMLSD300069-2026	Gear Pump Coupler	1
70	BWMLSD300070-2026	Hex Bolt M8x30	4
71	BWMLSD300071-2026	Gear Pump Stand	1
72	BWMLSD300072-2026	Engine Coupler	1
73	BWMLSD300073-2026	Engine Flat Key	1

Ref #	Part No.	Description	Qty
74	BWMLSD300074-2026	Spring Washer Ø8	4
75	BWMLSD300075-2026	Engine	1
76	BWMLSD300076-2026	Wheel	2
77	BWMLSD300077-2026	Flat Washer Ø20	2
78	BWMLSD300078-2026	Hex Slotted NutM20x1.5	2
79	BWMLSD300079-2026	Cotter Pin Ø4x40	2
80	BWMLSD300080-2026	Axle Cap	2
81	BWMLSD300081-2026	Hex Bolt M10x25	4
82	BWMLSD300082-2026	Hex Bolt M10x20	2
83	BWMLSD300083-2026	Spring Washer Ø10	2
84	BWMLSD300084-2026	Right Fender	1
85	BWMLSD300085-2026	Oil Plug	1
86	BWMLSD300086-2026	Lifting Plate assembly	1
87	BWMLSD300087-2026	Pump Connector	1
88	BWMLSD300088-2026	Flat Washer Ø18	4
89	BWMLSD300089-2026	Spring Washer Ø18	4
90	BWMLSD300090-2026	Nylon Lock Nut M18	4
91	BWMLSD300091-2026	Hex Bolt M8x70	4
92	BWMLSD300092-2026	Clamp	1
93	BWMLSD300093-2026	Hydraulic Hose (Valve - Pump)	1
94	BWMLSD300094-2026	Hydraulic Hose (Valve - Valve)	1
95	BWMLSD300095-2026	Oil Pipe	1
96	BWMLSD300096-2026	Clamp	2
97	BWMLSD300097-2026	Angle Connector	2
98	BWMLSD300098-2026	O Ring Ø80x2.4	1
99	BWMLSD300099-2026	Hex Bolt M5x10	4
100	BWMLSD300100-2026	Pump Cover	1

Section B. Lifting Table

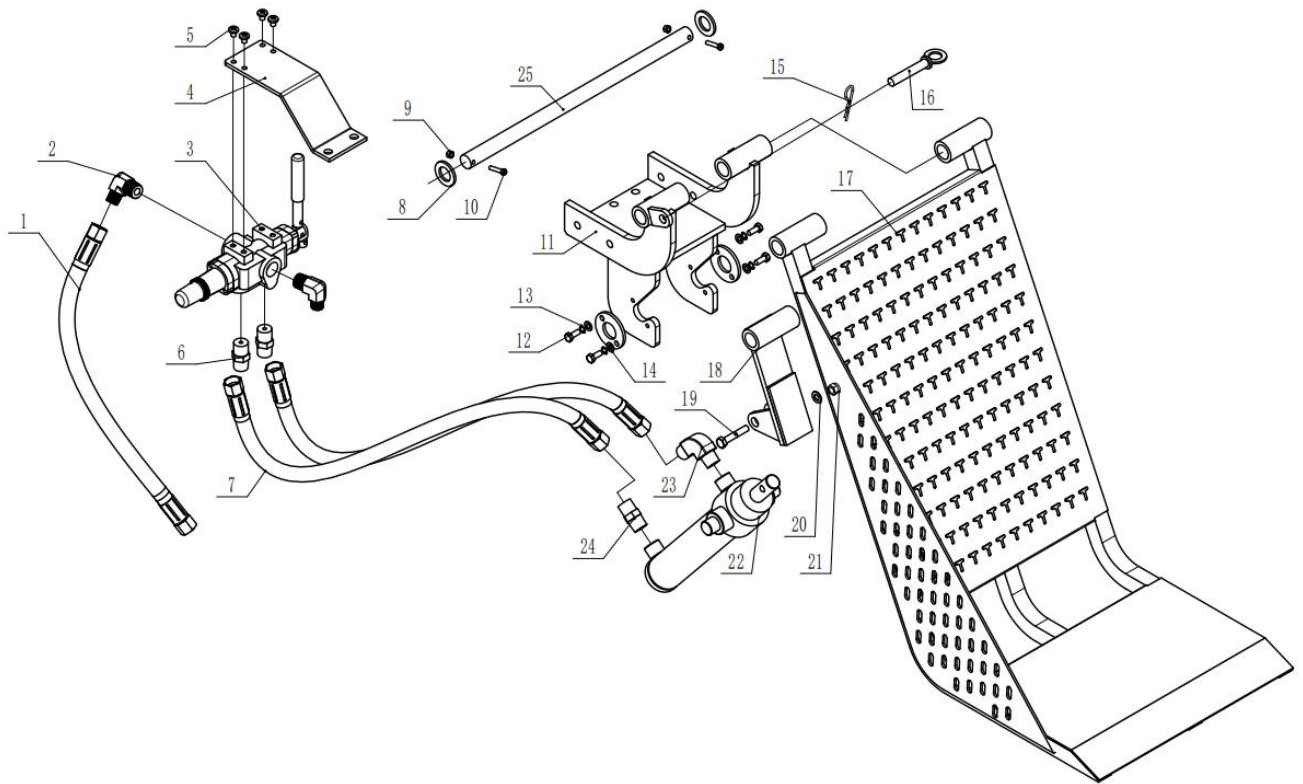

Ref #	Part No.	Description	Qty
86-1	BWMLSFLT00001	Hydraulic Hose (Valve – Oil Tank)	1
86-2	BWMLSFLT00002	Valve Angle Connector	2
86-3	BWMLSFLT00003	Lifting Valve	1
86-4	BWMLSFLT00004	Valve Mounting Plate	1
86-5	BWMLSFLT00005	Screw M8x20	4
86-6	BWMLSFLT00006	Connector	2
86-7	BWMLSFLT00007	Hydraulic Hose	2
86-8	BWMLSFLT00008	Flat Washer Ø24	2
86-9	BWMLSFLT00009	Nylon Lock Nut M6	2
86-10	BWMLSFLT00010	Screw M6x35	2
86-11	BWMLSFLT00011	Connecting Frame	1
86-12	BWMLSFLT00012	Hex Bolt M8x20	4
86-13	BWMLSFLT00013	Spring WasherØ8	4
86-14	BWMLSFLT00014	Flat Washer Ø8	4
86-15	BWMLSFLT00015	R Pin	1
86-16	BWMLSFLT00016	Safety Pin	1

Ref #	Part No.	Description	Qty
86-17	BWMLSDLT00017	Lifting Table	1
86-18	BWMLSDLT00018	Lift Arm	1
86-19	BWMLSDLT00019	Hex Bolt M12x70	1
86-20	BWMLSDLT00020	Flat Washer Ø12	1
86-21	BWMLSDLT00021	Nylon Lock Nut M12	1
86-22	BWMLSDLT00022	Lift Cylinder	1
86-23	BWMLSDLT00023	Cylinder Angle Connector	1
86-24	BWMLSDLT00024	Cylinder Connector	1
86-25	BWMLSDLT00025	Hinge Pin	1

Customer Service:

303 Warrigal Road, Cheltenham, Victoria 3192, Australia

Telephone: 13000 454 585

Website: www.BWMachinery.com.au

Email: admin@bwmachinery.com.au

Spare parts are available from our dealers and our official website