Head / Blade Type	Part Number		_ine Diameters Optional	FSA 45	FSA 56	FSE 60*	FSA 65* FSA 85*	FSA 90 R	FSA 130 R	FS 38 FS 40 C-E FS 45* / FS 46* FS 50 C-E	FS 55 FS 56 C-E	FS 55 R / FS 55 RC-E FS 56 RC-E FS 70 R FS 94 R	FS 80 R FS 90 R / FS 91 R FS 110 R / FS 111 R FS 130 R / FS 131 R	FS 100 RX FS 111 RX	FS 80 FS 90 / FS 91 FS 110 / FS 111 FS 130 / FS 131	FS 240 FS 250	FS 240 R FS 250 R	FS 310 / FS 311 FS 350	FS 360 C-E / FS 360 C-EM FS 460 C-EM	FS 450 K	FS 550 FS 560 C-EM	FSB-KM with KM 55 R / KM 56 R KM 90 R / KM 91 R KM 110 R / KM 111 R**	FS-KM with KM 55 R / KM 56 R**	FS-KM with KM 90 R / 91 R / 94 R KM 110 R / KM 111 R KM 130 R / KM 131 R**	KM with KMA
LIGHT GRASS TRIMMER HEAD	DS																								
AUTOCUT® 2-2	4008 710 2103	.080"	_		•																				
AUTOCUT® C 4-2	4006 710 2123	.080"					•																		
AUTOCUT® 5-2	4006 710 2103	.080"	_			•				•															
AUTOCUT® C 5-2 (DISC.)	4006 710 2106	.080"	_							•															
AUTOCUT® C 6-2	4006 710 2126	.080"	.095"							•															
AUTOCUT® 11-2	4004 710 2192	.095"	.080"																						
AUTOCUT® 25-2	4002 710 2191	.095"	.105"					•	•		•	•	•	•	•	•	•						•		•
AUTOCUT® C 25-2 (DISC.)	4002 710 2196	.095"										•1	•											•	
AUTOCUT® C 26-2	4006 710 2169	.095"	.105"								•		•	•2		•							•		
AUTOCUT® 30-2 (DISC.)	4002 710 2187	.105"	.118"																					•	
AUTOCUT® 36-2	4002 710 2170	.105"	.118"/.130"										•3	•	●3	•									
AUTOCUT® 40-2 (DISC.)	4003 710 2189	.105"	.118"																•	•					
AUTOCUT® 40-4 (DISC.)	4005 710 2102	.105"	.118"																	•	•				
AUTOCUT® 46-2	4003 710 2115	.105"	.118"/.130"																•	•					
AUTOCUT® 56-2	4005 710 2107	.105"	.118"/.130"																		•				
DUROCUT 5-2	4006 710 2131	.080"	.065"/.095"							•												•			
DUROCUT 20-2	4002 710 2182	.120"	.080"/.095"/.105"			•					•	•	•	•	•	•	•						•		•
DUROCUT 40-4	4005 710 2114	.155"	.120/.130"																•	•	•				
FIXCUTTM 30-2 (DISC.)	4001 710 2103	_	.080"/.095"/.105"					•			•	•	•		•	•4	•4						•	•	
FIXCUT™ 31-2	4001 710 2105	_	.080"/.095"/.105"						•		•	•	•			•4	•4						•		•
STIHL SUPERCUT™ 20-2	4002 710 2184	.095"	_					•	•		•	•	•	•	•	•	•						•		
STIHL SUPERCUT™ 40-2	4003 710 2142	.095"																	•	•					

* Trimmers equipped with loop handles. For models that are/were available with optional handles, "R" denotes loop-handle version.

** 2018 models and newer.

Approved for use with designated unit as originally equipped.

OApproved for use with loop handle (R) only if equipped with barrier bar deflector kit and a single or double shoulder harness.

☐ Approved for use with bike handle, double harness and limit stop.

¹ Not for use on FS 94 R

² Not for use on FS 100 RX ³ Not for use on FS 80, FS 80 R, FS 90, FS 90 R, FS 110 or FS 110 R

⁴ Not for use on FS 240 or FS 240 R

⁵ When using Grass-4 and Grass-8 metal cutting blades with FS 56 C-E, trimmer must be equipped with deflector (4144 710 8119).

⁶ Not for use on FS 560 C-EM

Note: Numbers with "mm" show arbor size. Consult your instruction manual or your authorized STIHL Dealer for approved cutting head/deflector combinations.

Note: Barrier bar and large deflector must be attached when using a metal blade with loop-handle (R) trimmer. Note: Specifications are as of Oct. 1, 2019. For most recent updates, visit STIHLUSA.COM.

IMPORTANT INFORMATION WARNING: Improper use of any brushcutter trimmer can cause serious or fatal injury. Read, understand and follow all safety instructions in your instruction manual. To reduce the risk of injury from blade contact, circular saw blades may be used on FS brushcutters that have a bicycle handle and double shoulder harness and not on FS brushcutters with a "J" handle or loop handle (R). Other rigid blades may be used on FS brushcutters having a bicycle handle, a "J" handle, or a loop handle equipped with a barrier bar. To reduce the risk of eye injury, always wear proper eye protection. Always use the

TRIMMERS & BRUSHCUTTERS

appropriate deflector for the type of cutting attachment, as explained in your instruction manual.

FS-KM with KM 90 R / 91 R / 94 F KM 110 R / KM 111 R KM 130 R / KM 131 R* FSB-KM with KM 55 R / KN KM 90 R / KN KM 110 R / KN FS-KM with KM 55 R / KN 38 40 C-E 45* / FS 50 C-E Trimmer Line Diameters R R S S Head / Blade Type Standard Optional Arbor Size Part Number HEAVY GRASS MOWING HEADS & BLADES STIHL POLYCUT™ 2-2 4008 710 2102 STIHL POLYCUT™ 7-3 4006 710 2127 STIHL POLYCUTTM 20-3 (DISC.) 4002 710 2189 STIHL POLYCUTTM 41-3 (DISC.) 4003 710 2114 TRIMCUT™ 31-2 4002 710 2156 TRIMCUT™ 41-2 4003 710 2108 TRIMCUT™ 51-2 4005 710 2104 20 MM **GRASS-4** 4000 713 3801 25.4 MM | 4001 713 3801 **GRASS-4 GRASS-8** 4000 713 3802 25.4 MM | 4001 713 3803 **GRASS-8 BRUSH KNIVES** BRUSH KNIFE-250 MM 25.4 MM 4112 713 4100 BRUSH KNIFE-300 MM 20 MM 4119 713 4100 BRUSH KNIFE-350 MM 20 MM 4110 713 4100 FORESTRY SAW BLADES SCRATCHER-200 MM 20 MM 4000 713 4200

GRASS AROUND OBSTACLES

CHISEL-200 MM

CHISEL-200 MM

CHISEL-225 MM

STIHLUSA.COM

DUROCUT LINE HEAD

operating in severe

applications.

DUROCUT

DUROCUT

20 MM

Ideal trimmer head if you

4000 713 4205

4104 713 4200

4119 713 4200

25.4 MM | 4112 713 4203

20 MM 4110 713 4204

Double line for mowing and prefer manual heads that trimming. The nylon line require precut lengths length is adjusted by hand. of nylon line, even when

TRIMCUT[™] LINE HEAD

AUTOCUT° LINE HEAD

Double or quadruple line for

mowing and trimming. The

nylon line length is adjusted

by tapping the cutting head

against the ground.



Double or quadruple line for

mowing and trimming. The

nylon line length is adjusted

by tapping the cutting head

STIHL SUPERCUT

Double line for mowing and

trimming. The mowing line

is automatically kept at the

optimum cutting length.

against the ground.

LINE HEAD



Double line for mowing and

trimming. The mowing line

MOWING HEAD


Universal cutting tool for

trimming and working on

large areas. With three

pivoting thermoplastic



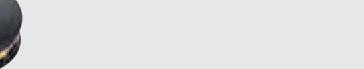



REEDS & BUSHES


trunks.



BRUSH KNIFE

tree trunks. CIRCULAR SAW



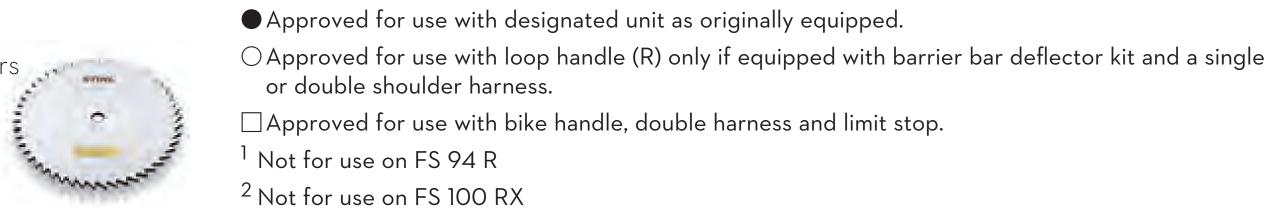

CIRCULAR SAW BLADE, CHISEL TOOTH

² Not for use on FS 100 RX ³ Not for use on FS 80, FS 80 R, FS 90, FS 90 R, FS 110 or FS 110 R ⁴ Not for use on FS 240 or FS 240 R

"R" denotes loop-handle version.

** 2018 models and newer.

or double shoulder harness.

⁵ When using Grass-4 and Grass-8 metal cutting blades with FS 56 C-E, trimmer must be equipped with deflector (4144 710 8119). ⁶ Not for use on FS 560 C-EM

* Trimmers equipped with loop handles. For models that are/were available with optional handles,

Note: Numbers with "mm" show arbor size. Consult your instruction manual or your authorized STIHL Dealer for approved cutting head/deflector combinations. Note: Barrier bar and large deflector must be attached when using a metal blade with loop-handle (R) trimmer.

IMPORTANT INFORMATION WARNING: Improper use of any brushcutter trimmer can cause serious or fatal injury. Read, understand and follow all safety instructions in your instruction manual. To reduce the risk of injury from blade contact, circular saw blades may be used on FS brushcutters that have a bicycle handle and double shoulder harness and not on FS brushcutters with a "J" handle or loop handle (R). Other rigid blades may be used on FS brushcutters having a bicycle handle, a "J" handle, or a loop handle equipped with a barrier bar. To reduce the risk of eye injury, always wear proper eye protection. Always use the appropriate deflector for the type of cutting attachment, as explained in your instruction manual.

Note: Specifications are as of Oct. 1, 2019. For most recent updates, visit STIHLUSA.COM.




SCRATCHER-200 MM 25.4 MM 4112 713 4201

SCRATCHER-225 MM 20 MM

SCRATCHER-250 MM 20 MM

Ideal trimmer head if you prefer manual heads that require precut lengths of nylon line, even when operating in severe

applications

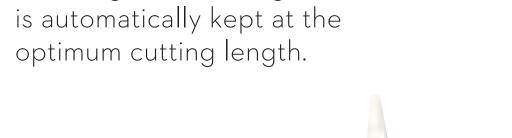






BUSHES & THIN



BLADE, SCRATCHER



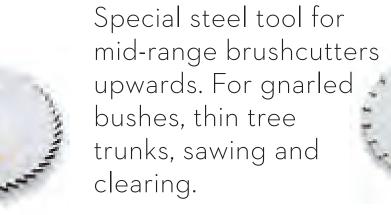



CIRCULAR SAW

TOOTH

bushes and thin

BLADE, SCRATCHER

